 




COPY ROLLING CODE NORMAL REMOTES with AIR4 V - AIR4 PLUS V (EU&IB)

Air⁴

1 PLACE THE REMOTE CONTROL TO BE CLONED IN FRONT OF THE "AIR4", AT A DISTANCE OF ABOUT 2 CENTIMETRES.

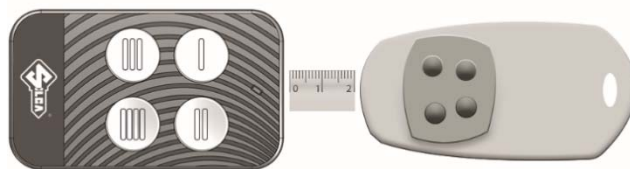 


2 PRESS AND HOLD DOWN **BUTTON 1** ON THE "AIR4" REMOTE CONTROL.





3 AT THE SAME TIME PRESS **BUTTON 4** FOUR TIMES.

4 RELEASE BOTH BUTTONS OF "AIR4" REMOTE CONTROL.

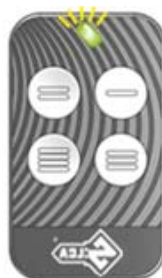

5 "AIR4" REMOTE CONTROL LED WILL FLASH BRIEFLY ABOUT EVERY 2 SEC.

  6 PRESS AND HOLD DOWN THE BUTTON TO BE COPIED FROM THE ORIGINAL REMOTE CONTROL AND WAIT FOR THE "AIR4" LED TO START **FLASHING RAPIDLY**, WHICH CONFIRMS THAT THE CODE HAS BEEN ACQUIRED. RELEASE THE ORIGINAL REMOTE CONTROL'S BUTTON.

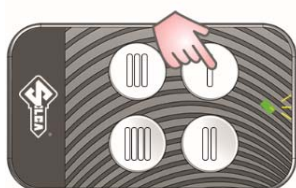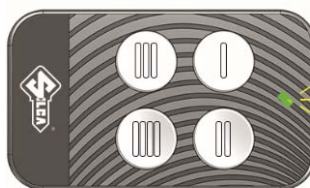

7 WHILE THE LED IS FLASHING, PRESS THE "AIR4" BUTTON TO WHICH THE CODE MUST BE TRANSFERRED AND HOLD DOWN UNTIL THE LED GOES OUT.

NOTE: A PROCEDURE IS REQUIRED ON THE RECEIVER (A.L.S OR ORIGINAL PROCEDURE)