




ROLLING SECURE LEARNING procedure FAAC 868 MASTER with AIR4 V-AIR4 PLUS V (EU&B)

Air₄

1- PLACE THE RADIO CONTROL TO BE CLONED IN FRONT OF "AIR4" AT A DISTANCE OF ABOUT 4/5 CM.

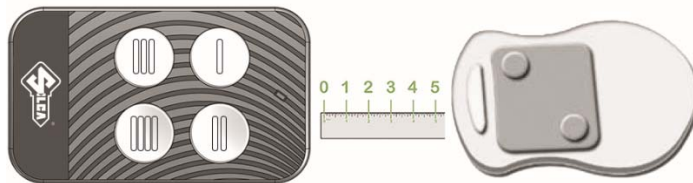

2- HOLD DOWN **BUTTON 1** ON "AIR4".

3- AT THE SAME TIME PRESS **BUTTON 4** FOUR TIMES.




4- RELEASE BOTH BUTTONS ON "AIR4".

5- AIR4 LED WILL FLASH BRIEFLY ABOUT EVERY 2 SECONDS.



7- SIMULTANEOUSLY PRESS THE TWO **BUTTONS 1 AND 2** ON THE FAAC REMOTE CONTROL AND **RELEASE** AS SOON AS THE LED BEGINS TO FLASH. (TRANSMISSION OF SOURCE CODE).

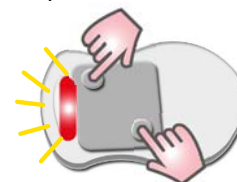

8- WHILE THE FAAC REMOTE CONTROL IS FLASHING PRESS ONCE TIME THE BUTTON TO BE COPIED.



6- HOLD DOWN THE BUTTON ON THE ORIGINAL REMOTE CONTROL TO BE COPIED. WAIT FOR THE "AIR4" LED TO GO ON WITHOUT FLASHING, RELEASE BUTTON AND THEN START DOUBLE FLASHING ABOUT EVERY 2 SECONDS.



9- THE LED WILL THEN FLASH RAPIDLY, PRESS THE BUTTON ON WHICH THE CODE WILL BE SAVED AND HOLD DOWN UNTIL THE LED GOES OUT.



10- APPROACH THE AUTOMATION AND PRESS THE "AIR4" REMOTE CONTROL REPEATEDLY UNTIL THE AUTOMATION ACTIVATES.

